


Turn signal switch inside steering column hub.

A right turn signal command pushes in direction of black arrow and results in disconnecting right rear lamp from the brake circuit and activating a right turn signal.

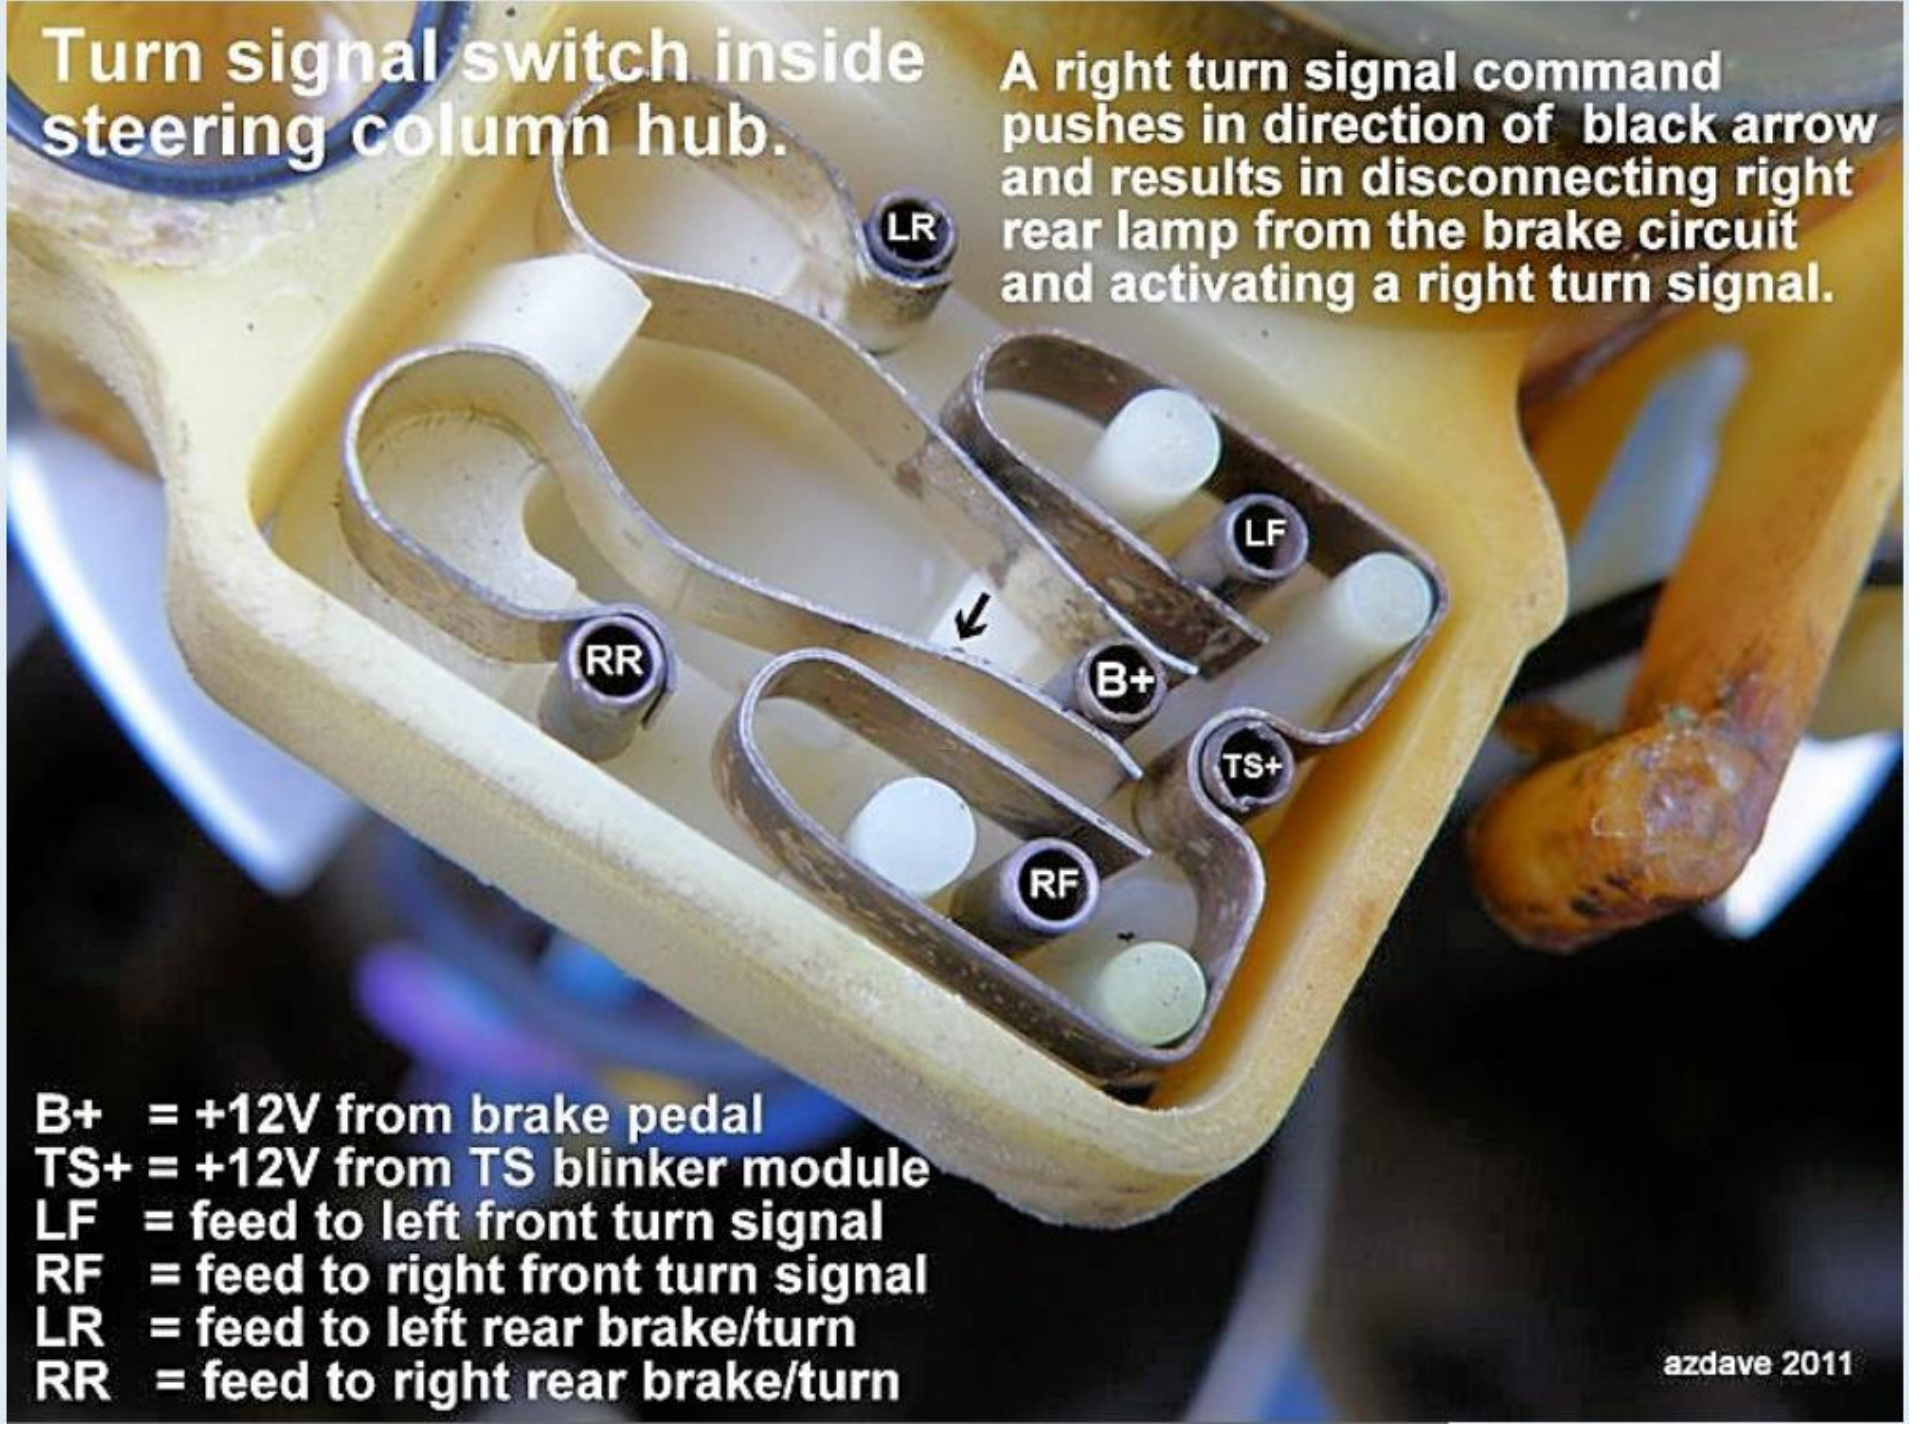

- B+ = +12V from brake pedal
- TS+ = +12V from TS blinker module
- LF = feed to left front turn signal
- RF = feed to right front turn signal
- LR = feed to left rear brake/turn
- RR = feed to right rear brake/turn